



OPERATING INSTRUCTIONS

FLASHER / FIRE ALARM / BUZZER OPTIONS FOR CCDS AND SOV AC ONLY (AC) AND BATTERY BACKUP EMERGENCY (EM) EXIT SIGNS

THESE INSTRUCTIONS ARE TO BE USED IN CONJUNCTION WITH THE OPERATING INSTRUCTIONS SUPPLIED WITH THE EXIT SIGN

Battery Backup Emergency (EM) exit signs that are equipped with the FLASH IN EMERGENCY MODE (F) option or BUZZER IN EMERGENCY MODE (FZ) option will automatically flash/beep in the emergency mode but not flash/beep on AC operation. AC Only (AC) exit signs that are equipped with the (F) option or (FZ) option will flash/beep continuously while power is supplied.

AC Only (AC) and Battery Backup Emergency (EM) exit signs that are equipped with the FIRE ALARM SIGNAL MODE FLASH (FA) or BUZZER (FB) options will automatically flash/beep in both the AC and emergency modes upon application of a fire alarm signal to the YELLOW 18 AWG leads. The fire alarm signal can be either AC or DC of either polarity, and range from 12 to 24 volts. The current draw from the fire alarm signal is less than 10 milliamps.

This exit sign includes one of the above options, and is intended for installation in locations where such features are permitted by local codes.

Flasher Rate: 60 per minute

Duty cycle: 50 percent