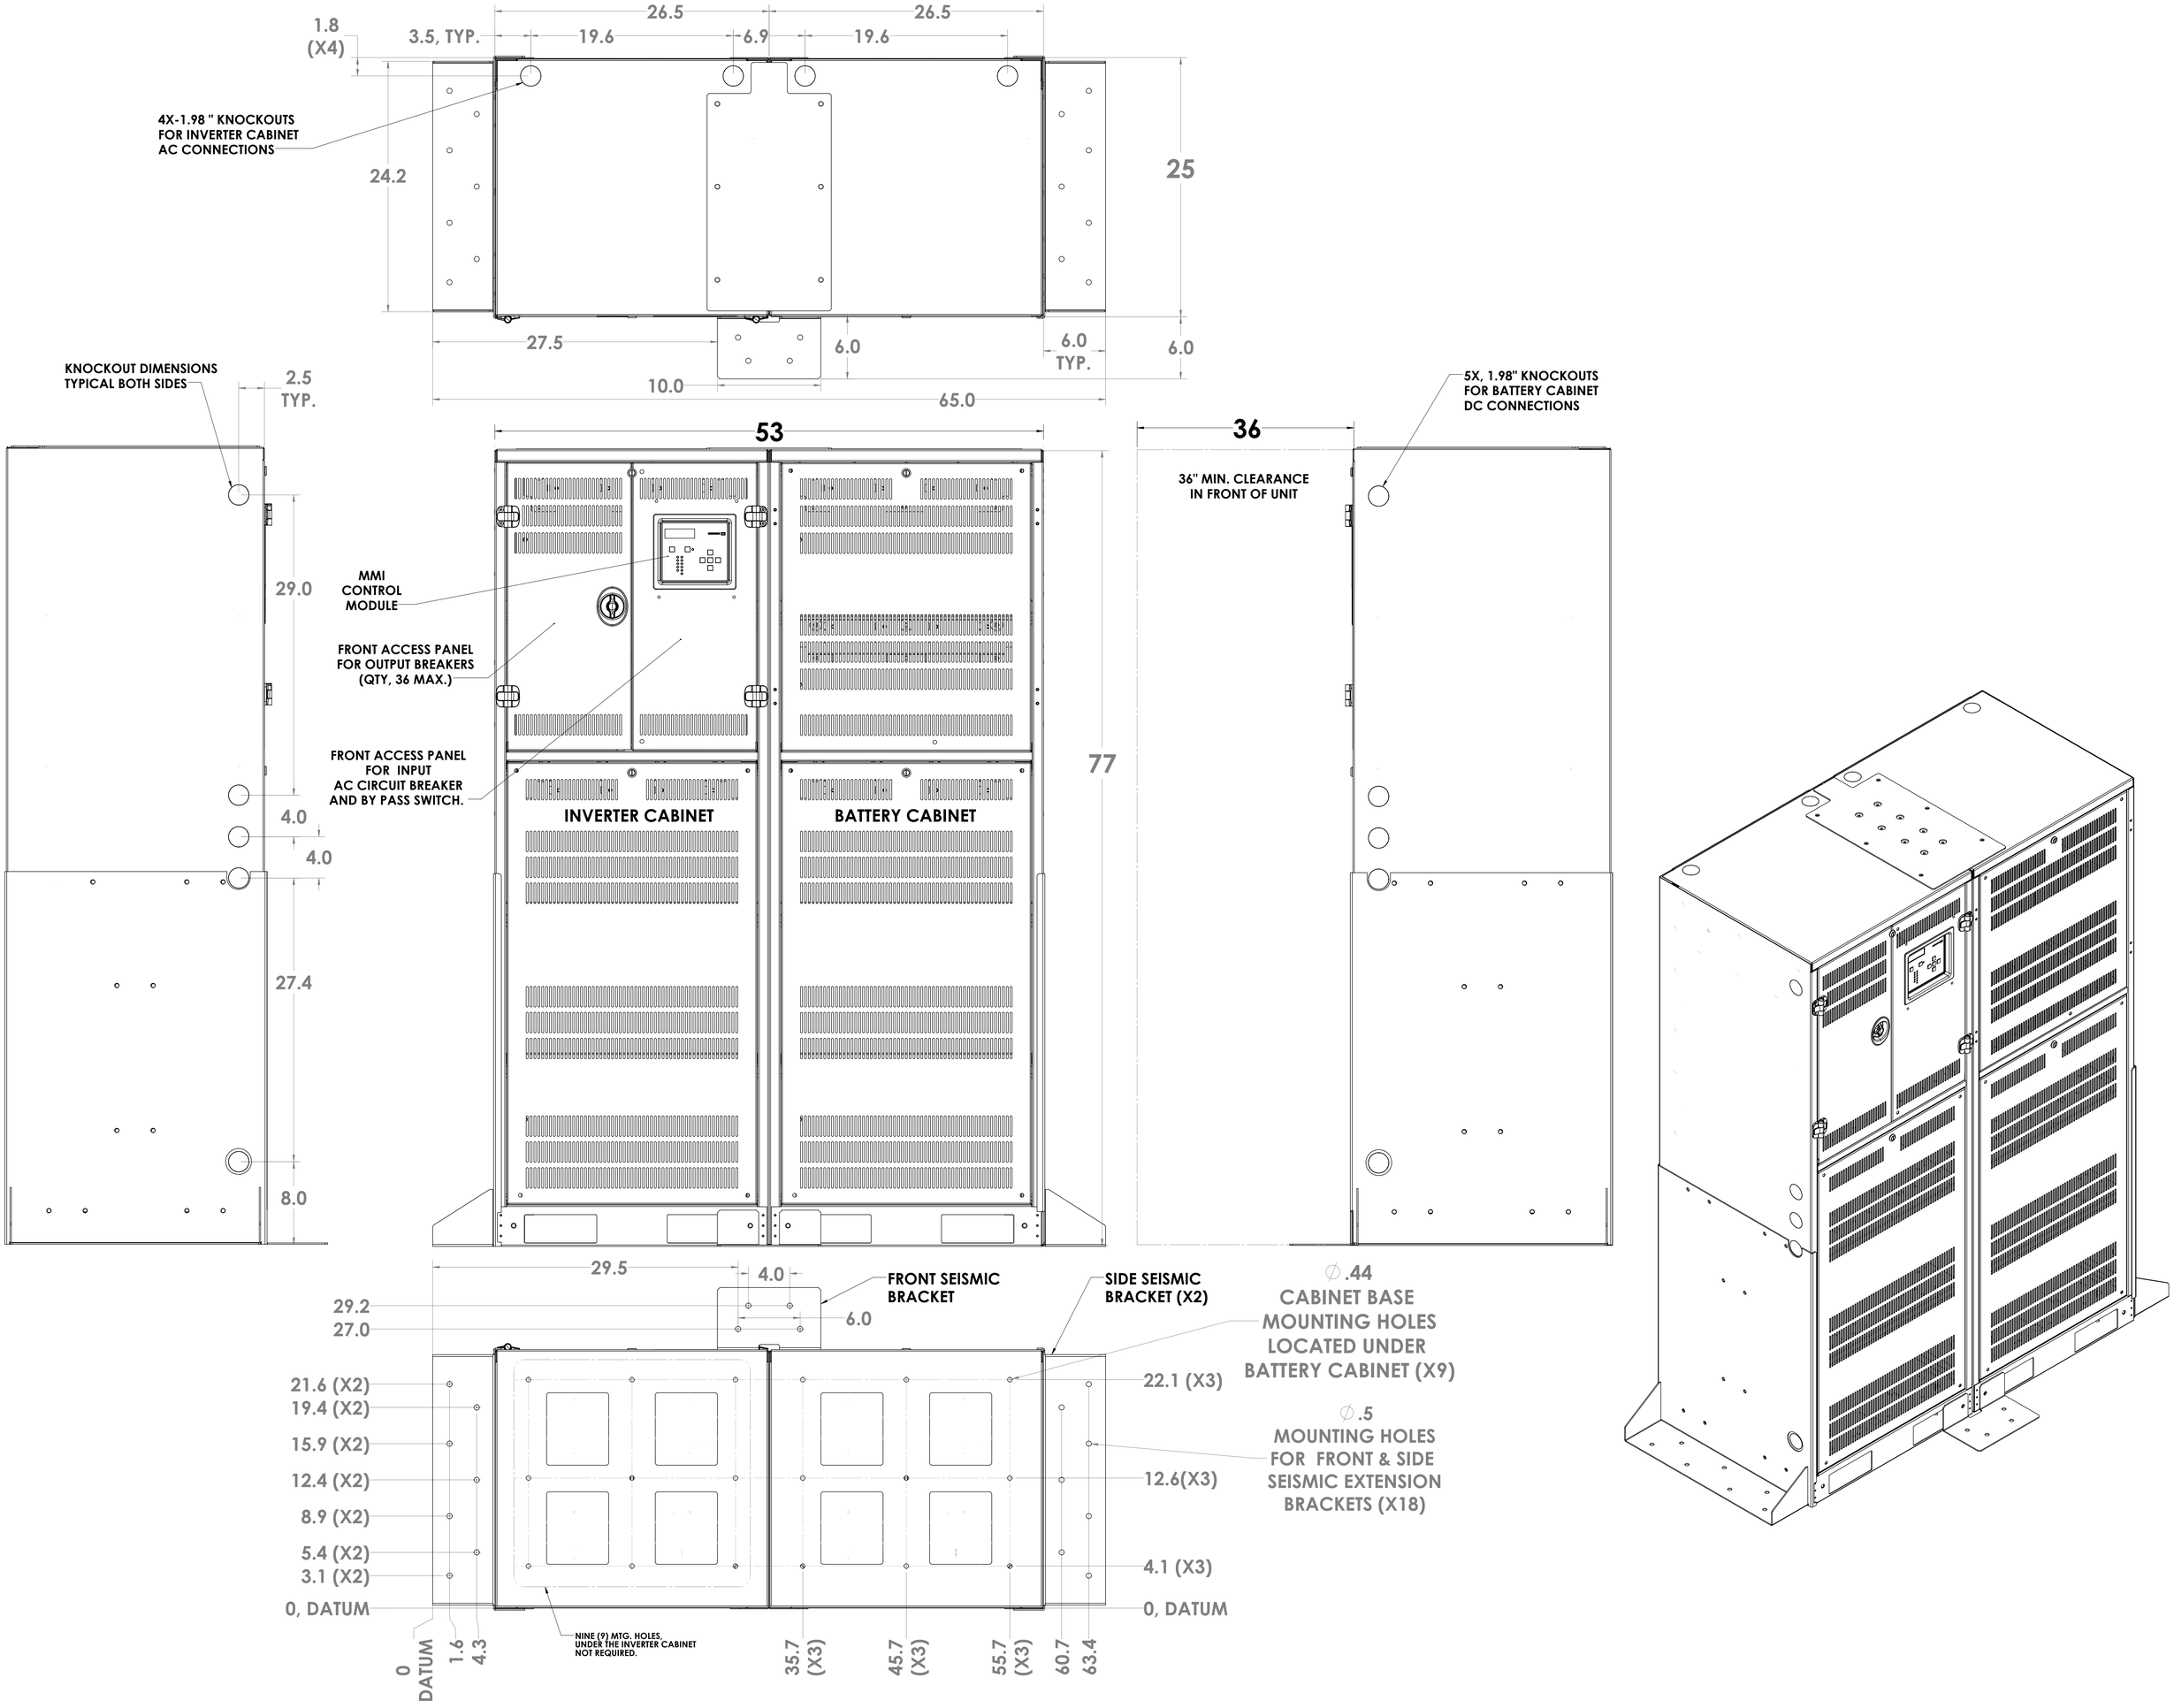
1.8
(X4)
3.5, TYP.
26.5
19.6
6.9
19.6
26.5
4X-1.98 " KNOCKOUTS
FOR INVERTER CABINET
AC CONNECTIONS
24.2
25
27.5
6.0
6.0
TYP.
6.0
10.0
65.0
KNOCKOUT DIMENSIONS
TYPICAL BOTH SIDES
2.5
TYP.
29.0
4.0
4.0
27.4
8.0
53
36
36" MIN. CLEARANCE
IN FRONT OF UNIT
5X, 1.98" KNOCKOUTS
FOR BATTERY CABINET
DC CONNECTIONS
MMI
CONTROL
MODULE
FRONT ACCESS PANEL
FOR OUTPUT BREAKERS
(QTY, 36 MAX.)
FRONT ACCESS PANEL
FOR INPUT
AC CIRCUIT BREAKER
AND BY PASS SWITCH.
77
INVERTER CABINET
BATTERY CABINET
29.5
4.0
FRONT SEISMIC
BRACKET
SIDE SEISMIC
BRACKET (X2)
29.2
27.0
6.0
∅.44
CABINET BASE
MOUNTING HOLES
LOCATED UNDER
BATTERY CABINET (X9)
21.6 (X2)
19.4 (X2)
15.9 (X2)
12.4 (X2)
8.9 (X2)
5.4 (X2)
3.1 (X2)
0, DATUM
22.1 (X3)
∅.5
MOUNTING HOLES
FOR FRONT & SIDE
SEISMIC EXTENSION
BRACKETS (X18)
12.6(X3)
4.1 (X3)
0, DATUM
NINE (9) MTG. HOLES,
UNDER THE INVERTER CABINET
NOT REQUIRED.
0
DATUM
1.6
4.3
35.7
(X3)
45.7
(X3)
55.7
(X3)
60.7
63.4